



HP HANDHELD 400 SERIES 5 BAY CRADLE CE194A  
NON-WALL MOUNT INSTALLATION INSTRUCTIONS

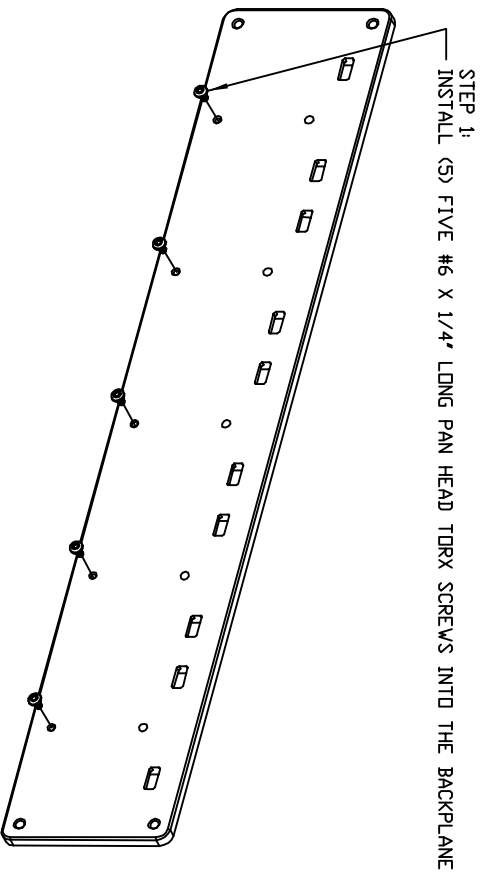

STEP 2:  
INSTALL (5) BINS INTO BACKPLANE BY INSERTING REAR HOOKS  
INTO BACKPLANE UNTIL BIN IS AGAINST BACKPLANE  
AND THEN PUSHING DOWN (REPEAT FOR REMAINING BINS)

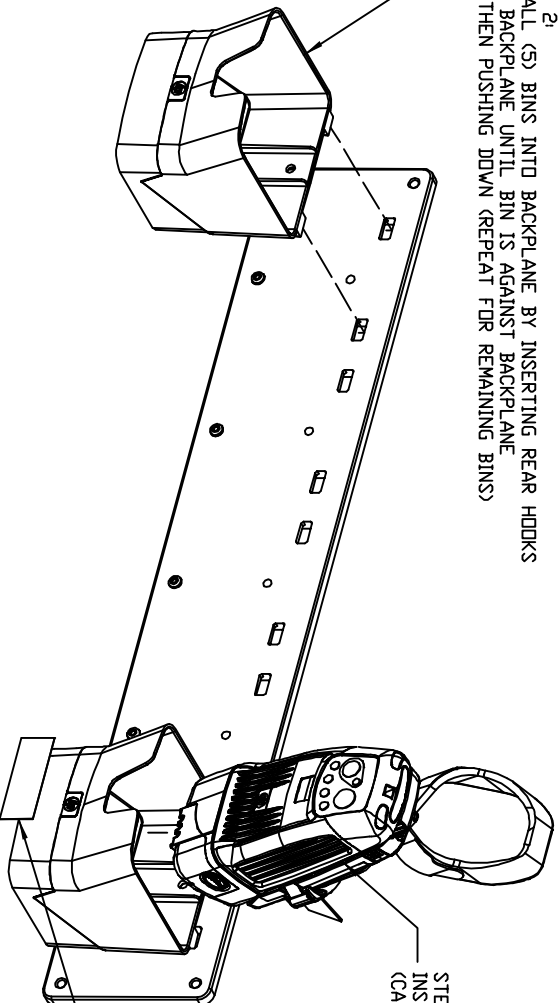

STEP 3:  
INSERT HP HANDHELD SP400 ALL-IN-ONE INTO BIN AS SHOWN  
(CAN BE INSTALLED WITH OR WITHOUT THE HAND MOUNT ATTACHED)

STEP 4:  
IF NEEDED APPLY CUSTOMER SUPPLIED LABEL TO FRONT OF BIN